


ASSEMBLY INSTRUCTIONS

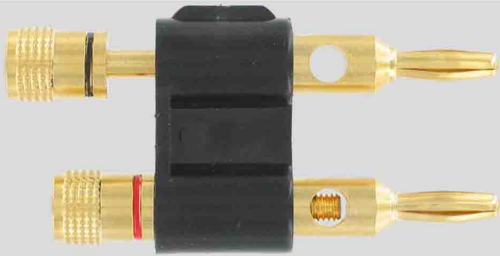


1



- Unscrew rear bolt just enough to feed the wire through the side opening.

2

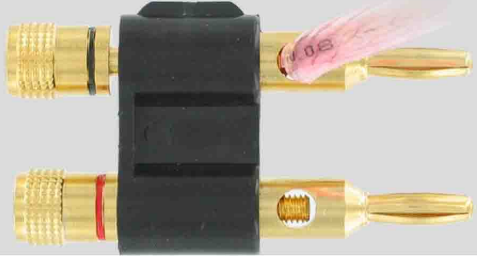

- Strip the wire approx. 0.5in, feed the speaker wire through the side opening. Tie up the Rear Bolt.